GC pre-treatment guide of indirect restorations

GLASS- CERAMICS (feldspathic ceramics, leucite-reinforced ceramics & lithium disilicate) p. 1

METAL & PORCELAIN FUSED TO METAL p. 1

ZIRCONIA & ALUMINA p. 2

COMPOSITE p. 2

HYBRID CERAMICS p. 3

FIBER POST p. 3

HIGH 5 GC LUTING SOLUTIONS

Discover more information on GC luting solutions and pre-treatment guidelines at **luting.gceurope.com**

PRE-TREATMENT OF GLASS- CERAMIC RESTORATION (feldspathic ceramics, leucite-reinforced ceramics & lithium disilicate).
Example: GC Initial LRF (leucite-reinforced ceramics) & GC Initial LiSi Press (lithium disilicate)

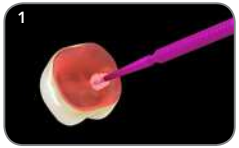

Etch with hydrofluoric acid (~ 5-9%) for 60 sec. in case of feldspatic & leucite-reinforced ceramics and for 20 sec. in case of lithium disilicate.

Rinse and dry.

Apply G-Multi PRIMER.*[1]

Dry with an air syringe.

*[1]: When using Fuji PLUS or FujiCEM 2, the use of a primer is not mandatory.

PRE-TREATMENT OF METAL & PORCELAIN FUSED TO METAL RESTORATION.
Example: GC Initial Cast NP with GC's veneering ceramic GC Initial MC

If not done by the lab, sandblast ($Al_2O_3 \leq 50\mu m$).

Rinse and dry.

Apply G-Multi PRIMER.*[2]

Dry with an air syringe.

*[2]: When using Fuji I, Fuji PLUS, FujiCEM 2 or G-CEM LinkAce, the use of a primer is not mandatory.

PRE-TREATMENT OF ZIRCONIA OR ALUMINA RESTORATION.
Example: GC Initial Zirconia Disk

If not done by the lab, sandblast ($Al_2O_3 \leq 50\mu m$).

Rinse and dry.

Apply G-Multi PRIMER.*[3]

Dry with an air syringe.

*[3]: When using Fuji I, Fuji PLUS, FujiCEM 2 or G-CEM LinkAce, the use of a primer is not mandatory.

PRE-TREATMENT OF COMPOSITE RESTORATION.
Example: GC GRADIA PLUS

If not done by the lab, sandblast ($Al_2O_3 \leq 50\mu m$).

Rinse and dry.

Apply G-Multi PRIMER.*[4]

Dry with an air syringe.

*[4]: When using Fuji PLUS or FujiCEM 2, the use of a primer is not mandatory.

PRE-TREATMENT OF HYBRID CERAMIC RESTORATION.
Example: GC CERASMART

If not done by the lab, sandblast ($Al_2O_3 \leq 50\mu m$). Alternatively, for CERASMART, if you don't have a sandblaster, apply hydrofluoric acid for 60 sec.

Rinse and dry.

Apply G-Multi PRIMER.

Dry with an air syringe.

PRE-TREATMENT OF FIBER POST.
Example: GC Fiber Post

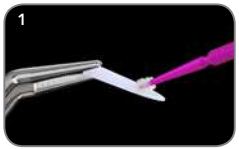

Clean with alcohol.

Dry.

Apply G-Multi PRIMER.

Dry with an air syringe.

952030
Y9700